





USER MANUAL

CPU WATER COOLING GLACIER 360


1 INTEL
AMD

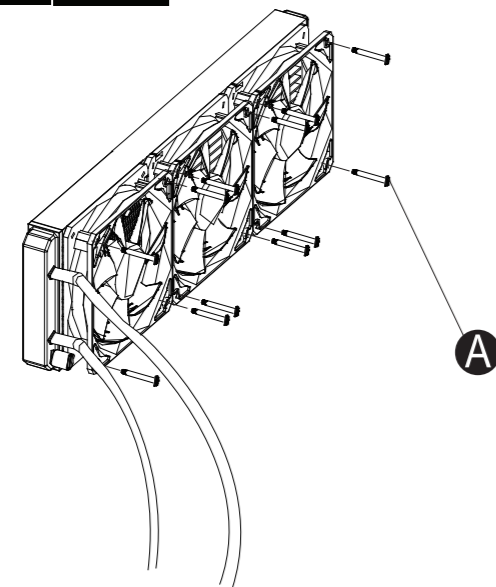


2 INTEL
AMD

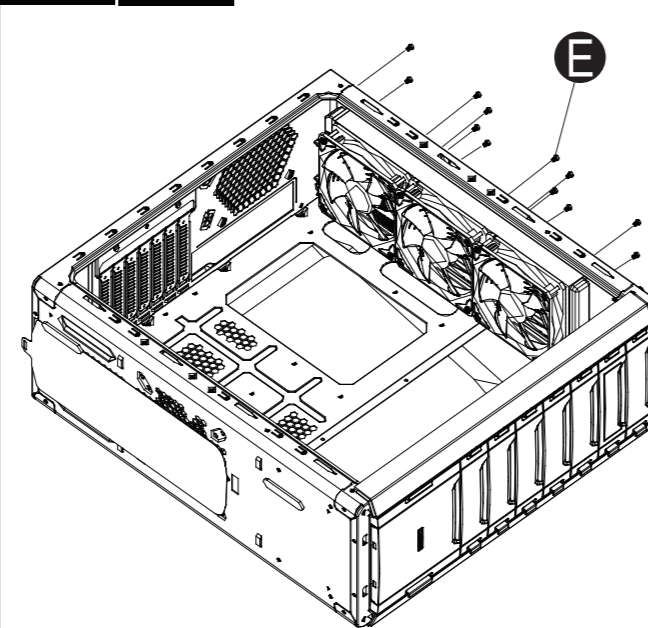

3 INTEL
AMD

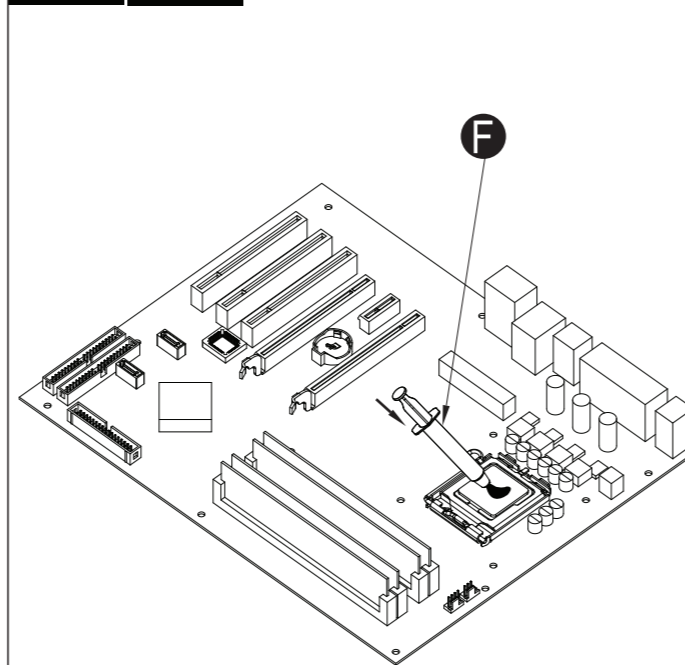


4 AMD

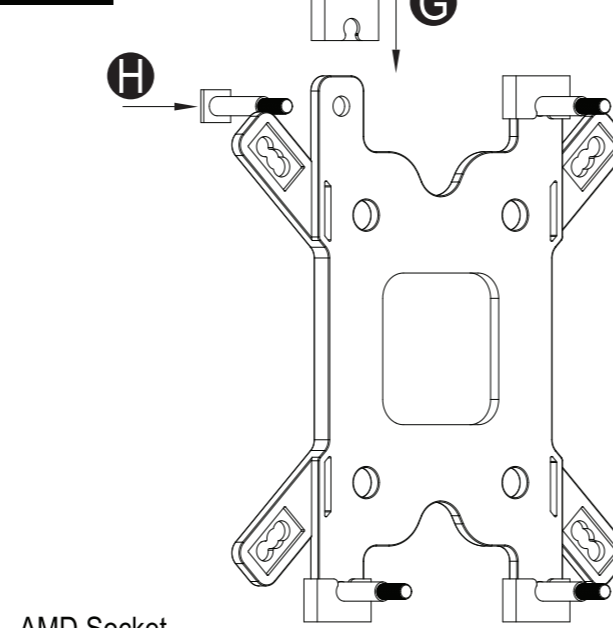


AMD Socket
FM2+/FM2/FM1/AM3+/AM3/AM2

5 AMD

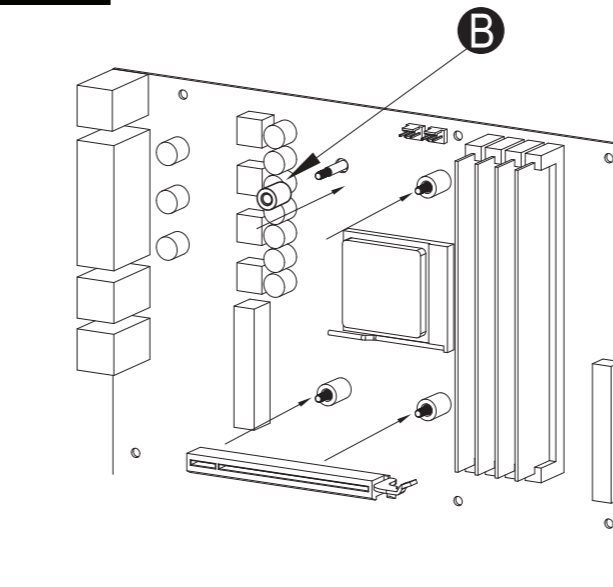


AMD Socket
FM2+/FM2/FM1/AM3+/AM3/AM2

6 AMD

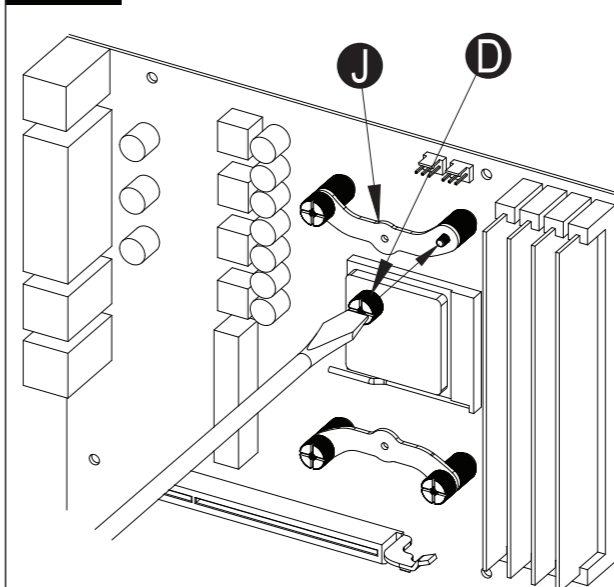



AMD Socket
FM2+/FM2/FM1/AM3+/AM3/AM2

7 AMD

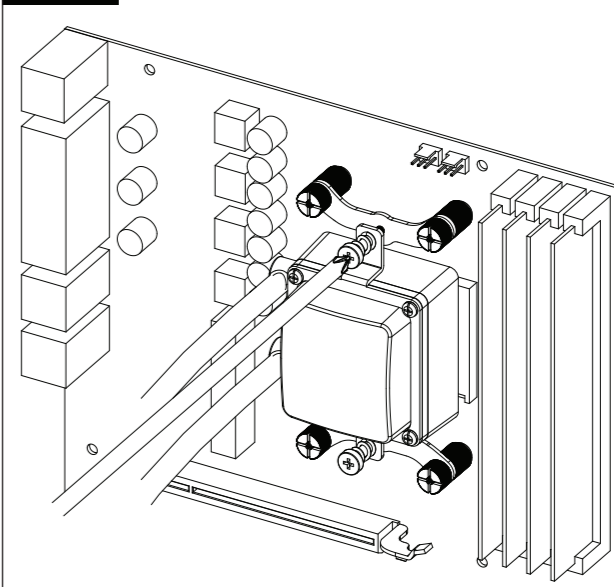


AMD Socket
FM2+/FM2/FM1/AM3+/AM3/AM2

8 AMD

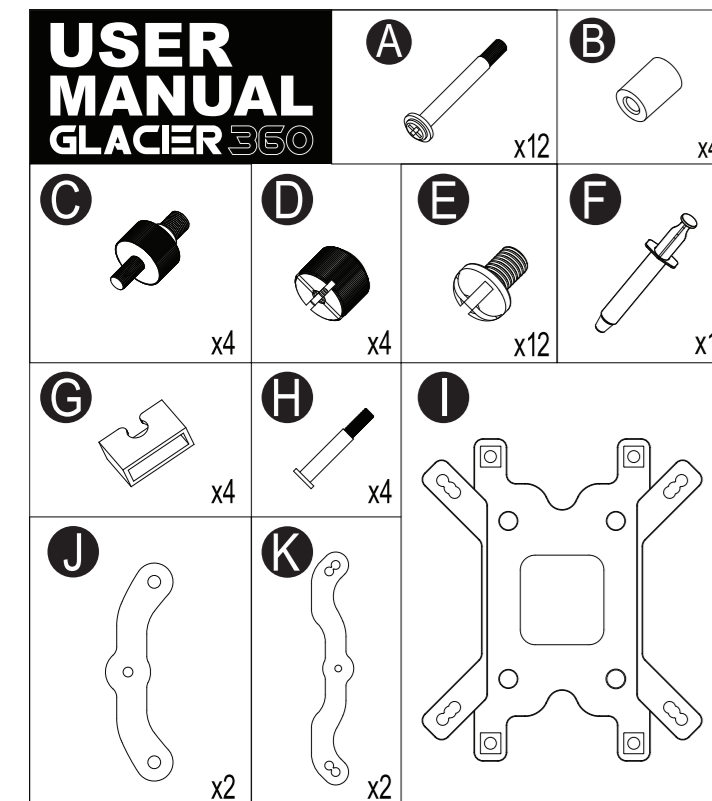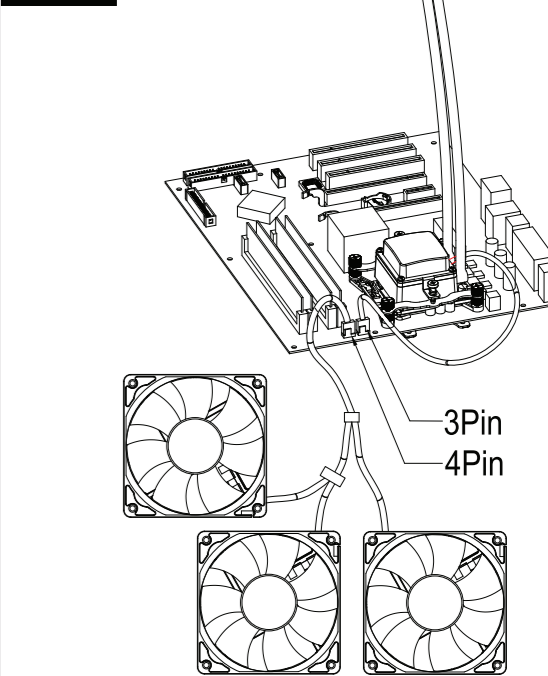


4 INTEL

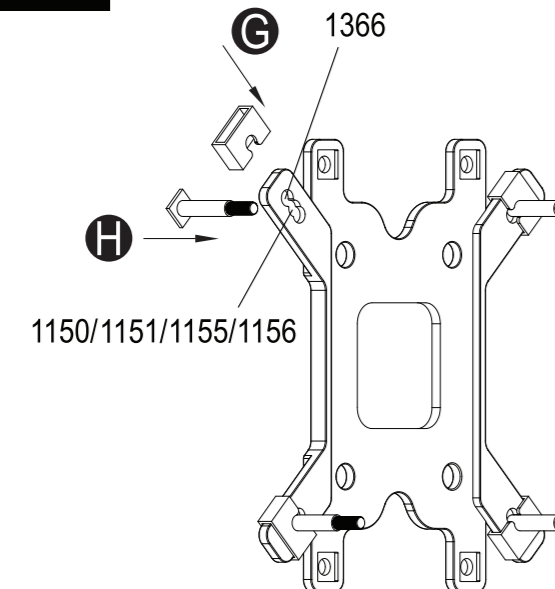


Intel Socket LGA
1366/1150/1151/1155/1156

5 INTEL

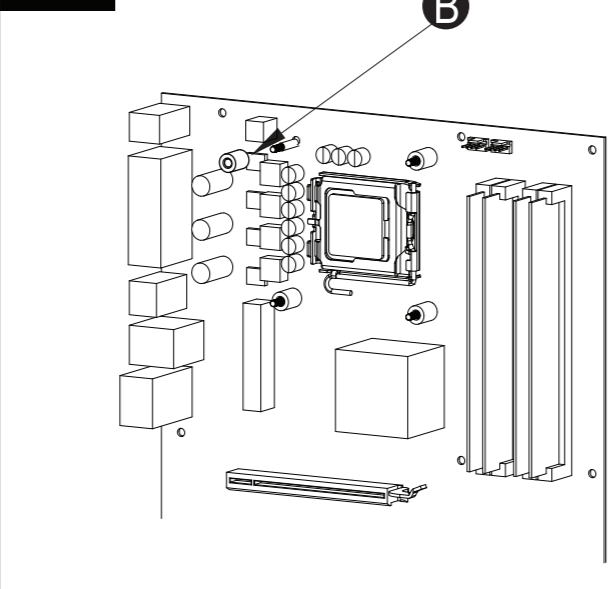


Intel Socket LGA
1366/1150/1151/1155/1156

6 INTEL

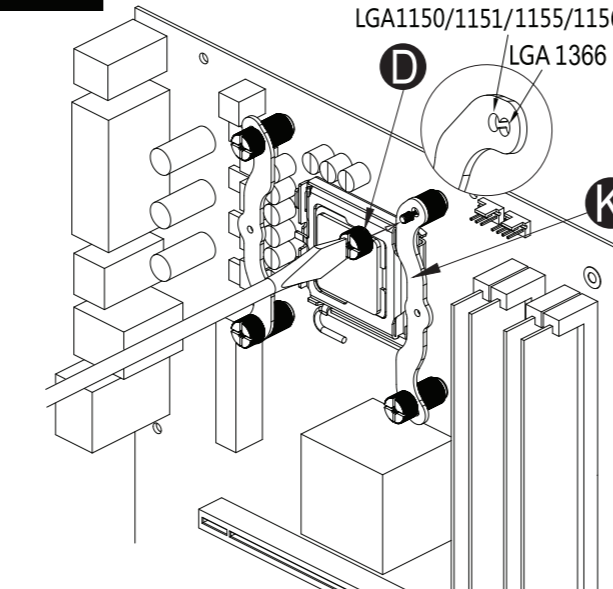


Intel Socket LGA
1366/1150/1151/1155/1156

7 INTEL

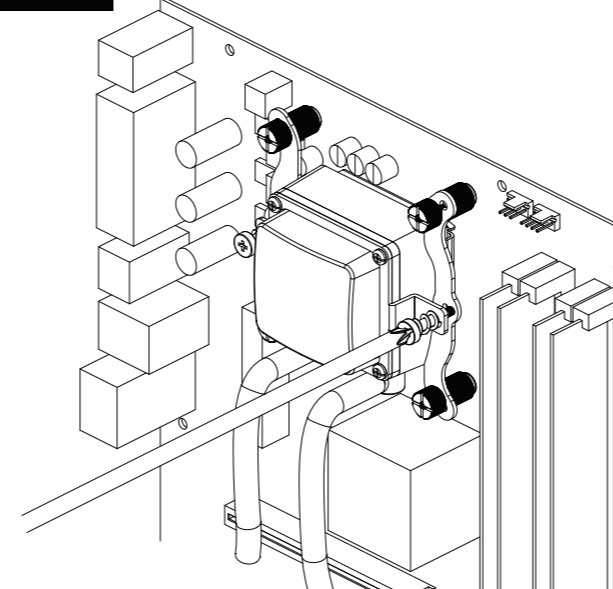


Intel Socket LGA
1366/1150/1151/1155/1156

8 INTEL

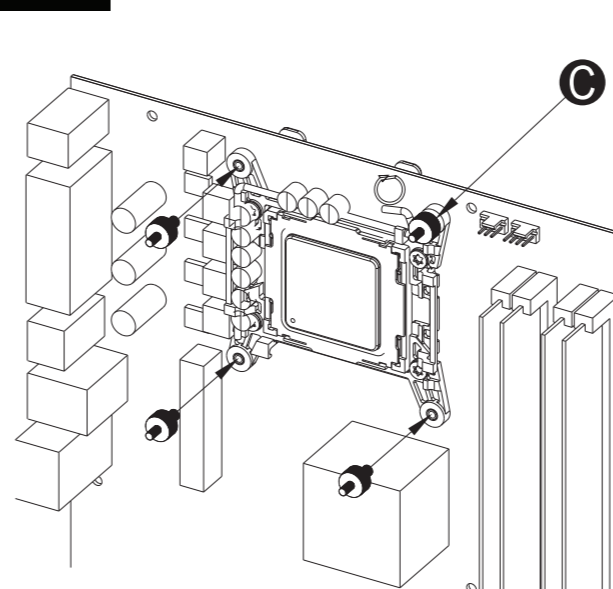


Intel Socket LGA 2011

9 INTEL

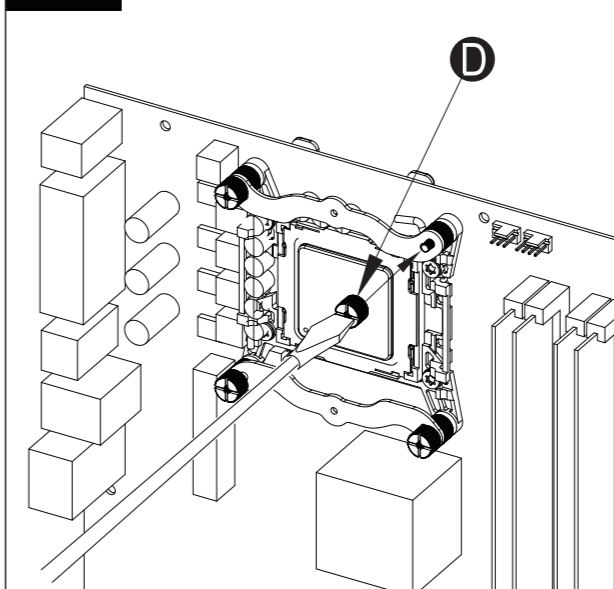

Intel Socket LGA 2011

10 INTEL

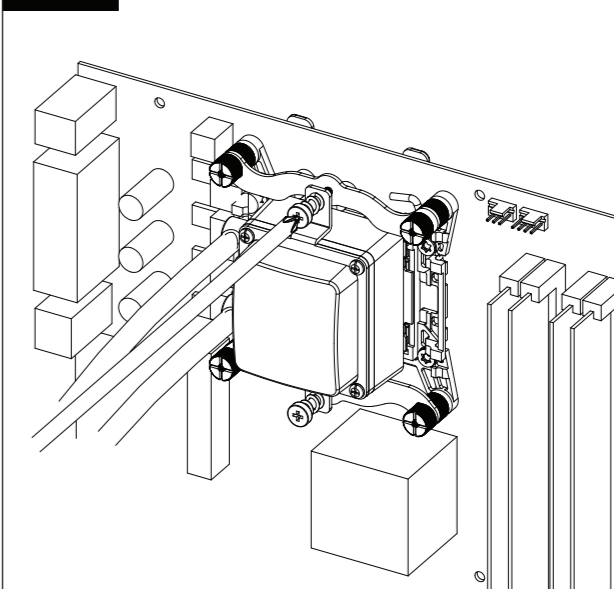

Intel Socket LGA 2011

11 INTEL

